




## Datasheet

# R57-090S-MD-PF-L12A-ATN-33A

## Metal Faced Access Panel - Picture Frame

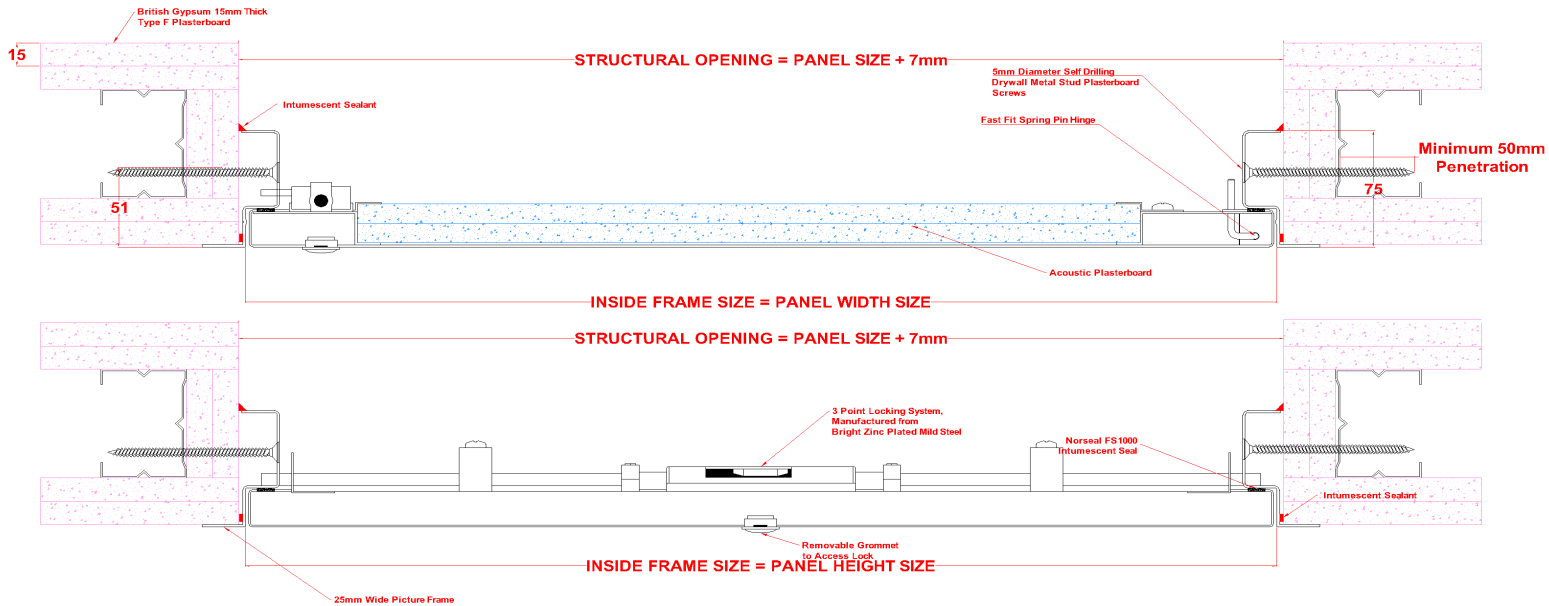

Walls Only



Yes Airtight Rating



33dB Acoustic Rating



90 Min Bidirectional Fire Rating



Picture Frame

### Description

This Riser Door is for use in standard flexible wall constructions. It is manufactured with a 25mm wide picture frame. The Riser Door has a Metal faced door. The Riser Doors door leaf is locked in place via a 3 Point Locking System as standard other lock options are available upon request. The Panel is Powder Coated RAL 9010 30% Gloss. Other colours available upon request.

### Tests

90 Minutes Fire Rated for integrity from both sides up to 1900x650mm in a wall application tested in accordance with BSEN 1634-1: 2014 + A1: 2018.

Acoustic Rated up to 33dB tested in accordance with BS EN ISO 10140-2:2010.

Air Pressure tested to 300Pa Class 2 tested in accordance with BS EN 1026: 2016.

Smoke tested in accordance with BS EN 1634-3: 2004.

### Seals

Draught Seals **YES** Smoke Seals **YES** Air Seals **YES** Acoustic Seals **YES** Intumescent Seals **YES**

### Manufacture

The Riser Door is manufactured from Zintec Steel with a 0.9mm thick Door and a 1.2mm Frame.

The Riser Door is Supplied with a Spring Pin Hinge System which saves time on fitting compared to a Full Piano Hinge system.

### Permitted Intumescent Sealants

Mann McGowan Pyromas A or Rockwool Fire Pro intumescent sealant.

### Fixing Type Details

5mm diameter X minimum 50mm screw penetration into the steel studs.

### Fitting

- 1) Open the door, release the Spring Pin hinge system, and lift the door out of the frame.
- 2) Place the frame in the aperture, ensuring it's 7mm larger than the panel size. Mark the hinge and door retaining pin positions.
- 3) Remove the frame, drill clearance holes for the marked positions.
- 4) Fix the frame into the aperture using all fixing holes, ensuring it is square and flush with the wall. Apply Intumescent Sealant to the rear of the Picture Frame before installation.
- 5) Refit the door by placing the lower Spring Pin hinge pin, sliding the top hinge pin until fully located, and closing the door. Apply sealant to the frame's rear, nominally 5mm wide sealing to the structural opening.
- 6) Lock the door with the key, ensuring it is flush with the frame.

**Independent bracing or support may be needed for the Riser Door weight.**